

Autofill System

Description:

- There are 3 level sensors: low, middle, and high.
- When the low sensor turns off, the fill solenoid is energized.
- When the mid sensor turns on, the fill solenoid is then de-energized until the low sensor turns off again
- If the high sensor is ever energized, the fill solenoid automatically shuts off and a fault light turns on

